

# GigBAR MOVE + ILS

## FIRMWARE UPDATE PROCEDURES

These firmware updates provide bug fixes and improvements to your Gigbar Move + ILS experience. Please review all information below prior to updating your fixture.

<u>US Version</u>	<u>EU Version</u>	<u>Description</u>
2.00		Added "par color" mode to limit washes to tri, quad or hex
2.01		Fix bug on initial start up
2.02		Added pan/tilt ranges for auto/sound programs
2.03		Added manual "XY speed" control in sound mode
2.04		Improved XY motor slipping in sound mode
2.05		Added follow spot mode
2.06		Improved sound response for color/gobo wheels. Improved operation of RF remote
2.07		Fixed a bug within the 3CH DMX personality
2.08		Fixed a bug with hard wire DMX signal
2.09		Fixed a bug within the 28CH & 50CH DMX personalities
2.10		(US only) Added laser pattern control in DMX mode. (EU only) Improved sound response in sound mode.

### **Special Notes:**

1. Do not use a thumb drive greater than 32GB.
2. The thumb drive must be formatted to FAT32.
3. The downloaded firmware file must be placed in the root directory on the thumb drive (no folders).

### **Firmware Update Instructions:**

1. Download the ZIP file onto your computer and extract the folder.
2. Transfer the contents from the ZIP file onto a USB thumb drive.
3. Hold down the menu button then power on the fixture to put it into upload mode.
4. Insert the USB thumb drive into the USB port on the rear of your unit, the Gigbar Move + ILS will automatically find the firmware and apply it.
5. The fixture will reset itself automatically and display the new firmware version during startup.
6. The USB thumb drive can be removed after the fixture restarts.