EVE TF-20X

User Manual







Table of Contents

1. Before You Begin	
What Is Included	
Unpacking Instructions	
Claims	
Text Conventions	
Symbols	
Disclaimer	
Intellectual Property	
Safety Notes	
2. Introduction	
Product Overview	3
Product Dimensions	3
3. Setup	4
AC Power	
AC Plug	
Track Adapter	
Mounting	
Orientation	
Rigging	
4. Maintenance	8
Product Maintenance	
5. Technical Specifications	9
Contact Us	
Warranty & Returns	10



1. Before You Begin

What Is Included

- Eve TF-20 X
- · Track adapter
- Barn doors

- · Gel frame
- Quick Reference Guide

Unpacking Instructions

Carefully unpack the product immediately and check the container to make sure all the parts are in the package and are in good condition.

Claims

If the box or the contents (the product and included accessories) appear damaged from shipping, or show signs of mishandling, notify the carrier immediately, not Chauvet. Failure to report damage to the carrier immediately may invalidate your claim. In addition, keep the box and contents for inspection.

For other issues, such as missing components or parts, damage not related to shipping, or concealed damage, file a claim with Chauvet within 7 days of delivery.

Text Conventions

Convention	Meaning	
1–512	A range of values	
50/60	A set of values of which only one can be chosen	
Settings	A menu option not to be modified	
<enter></enter>	A key to be pressed on the product's control panel	
ON	A value to be entered or selected	

Symbols

Symbol	Meaning
	Electrical warning. Not following these instructions may cause electrical damage to the product, accessories, or the user.
\triangle	Critical installation, configuration, or operation information. Not following these instructions may make the product not work, cause damage to the product, or cause harm to the operator.
i	Important installation or configuration information. The product may not function correctly if this information is not used.
	Useful information.

Disclaimer

Chauvet believes that the information contained in this manual is accurate in all respects. However, Chauvet assumes no responsibility and specifically disclaims any and all liability to any party for any loss, damage or disruption caused by any errors or omissions in this document, whether such errors or omissions result from negligence, accident or any other cause. Chauvet reserves the right to revise the content of this document without any obligation to notify any person or company of such revision, however, Chauvet has no obligation to make, and does not commit to make, any such revisions. Download the latest version from www.chauvetdj.com.

Intellectual Property

The works of authorship contained in this manual, including, but not limited to, all design, text and images are owned by Chauvet.

© Copyright 2023 Chauvet & Sons, LLC. All rights reserved.

Electronically published by Chauvet in the United States of America.

 
CHAUVET, the Chauvet logo, and Eve TF-20 X are registered trademarks or trademarks of Chauvet & Sons LLC. (d/b/a Chauvet and Chauvet Lighting) in the United States and other countries. Other company and product names and logos referred to herein may be trademarks of their respective companies.



Safety Notes

ALWAYS:

- Connect to a grounded circuit.
- ♦ Connect to operating voltages as specified on the product's spec sticker.



- Disconnect from its power source during periods of inactivity.
- Use a safety cable when suspending overhead.
- Heed all restrictions and warnings on the spec sticker.
- ♦ Mount in a location with at least 20 in (50 cm) of ventilation.
- Replace the fuse with the same type and rating.
- In the event of a serious operating problem, stop using immediately.

DO NOT:

- Open this product or attempt any repairs. It contains no user-serviceable parts.
- Look at the light source when the product is on.
- Use if the power cord is crimped or damaged.
- Disconnect by pulling on the power cord.
- Allow flammable materials close to the product when it is operating.
- ♦ Touch the housing when it is on.
- ♦ Block any ventilation holes/slots in the housing.
- ♦ Connect to a dimmer or rheostat.
- Carry the product by its power cord.
- ♦ Operate in temperatures higher than 104°F (40°C).
- ♦ Expose to environments that exceed the Ingress Protection (IP) rating.
- Expose to rain or moisture.
- ♦ Use outdoors.
- Submerge.
- Expose to corrosive environmental conditions such as temperature, humidity, salinity, pressure, radiation, or shock.
- Set this product on a flammable surface.




Keep this User Manual for future use. If the product is sold to someone else, be sure that they also receive this document.




2. Introduction

Product Overview

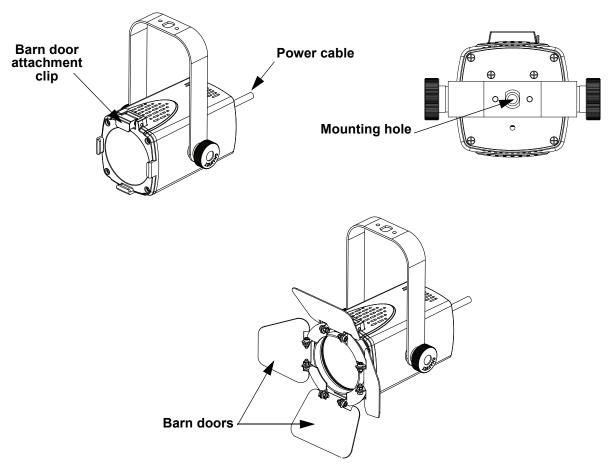

Product Dimensions

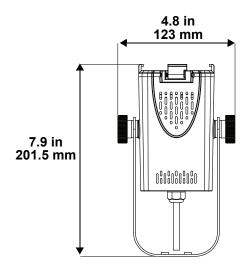





3. Setup

AC Power

The Eve TF-20 X has a fixed voltage power supply, and it can work with an input voltage range of either 120 VAC, 60 Hz or 220 VAC, 50 Hz, depending on the specific model. To determine the product's power requirements (circuit breaker, power outlet, and wiring), use the current value listed on the label affixed to the product's back panel, or refer to the product's specifications chart. The listed current rating indicates the product's average current draw under normal conditions.



- Always connect the product to a protected circuit (a circuit breaker or fuse).
 Make sure the product has an appropriate electrical ground to avoid the risk of electrocution or fire.
- To eliminate unnecessary wear and improve its lifespan, during periods of nonuse completely disconnect the product from power via breaker or by unplugging it.



Never connect the product to a rheostat (variable resistor) or dimmer circuit, even if the rheostat or dimmer channel serves only as a 0 to 100% switch.



To eliminate wear and improve its lifespan, during periods of disuse completely disconnect the product from power via breaker or by unplugging it.

AC Plug

This product can be connected to a dimmer or rheostat, by plugging in to a standard outlet controlled by a dimmer or rheostat, or by splicing the power cable and connecting to the included track adapter.

Connection	Wire (U.S.)	Wire (Europe)	Screw Color
AC Live	Black	Brown	Yellow/Brass
AC Neutral	White	Blue	Silver
AC Ground	Green/Yellow	Green/Yellow	Green/Silver




Splicing to a commercial track lighting or dimmer setup should be completed by a licensed professional.




Track Adapter

Before mounting this product, read the <u>Safety Notes</u>. To splice the included Track Adapter onto the Eve TF-20 $\rm X$:

- 1. Cut the power cable, leaving 1.5 feet for maneuverability.
- 2. Strip enough of the cable and wires to allow for splicing.
- 3. Dismantle the Track Adapter:

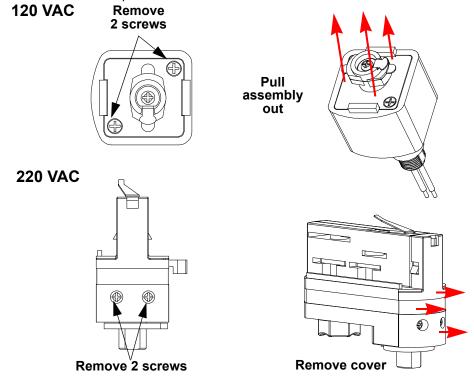


4. Pass the cable through each piece and the mounting bracket, as shown in the diagram below.

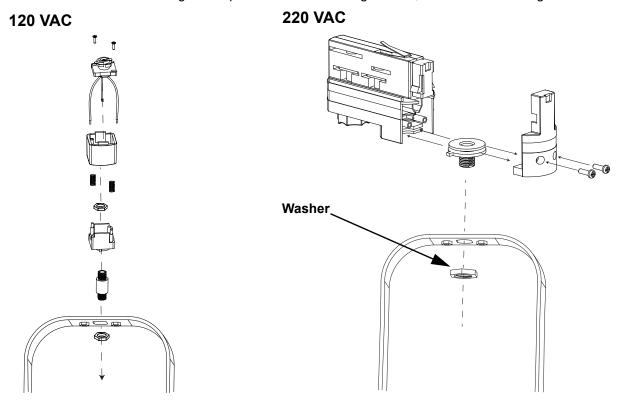



5. Splice to the Track Adapter as shown in the diagram below.

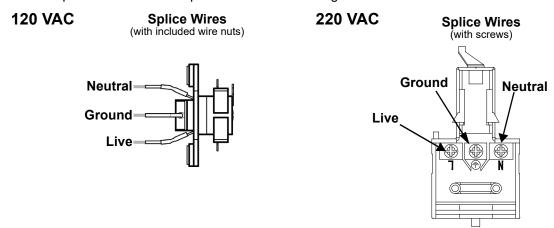

6. Secure the Track Adapter to the mounting bracket using the hollow bolt and nut(s), and reassemble it.



Mounting

Before mounting the product, read and follow the safety recommendations indicated in the Safety Notes.


Orientation

The Eve TF-20 X may be mounted in any position; however, make sure adequate ventilation is provided around the product.

Rigging

- Before deciding on a location for the product, always make sure there is easy access to the product for maintenance and programming purposes.
- Make sure that the structure onto which the product is being mounted can support the product's weight. See the <u>Technical Specifications</u> for weight information.
- When mounting the product overhead, always use a safety cable. Mount the product securely to a rigging point, whether an elevated platform or a truss.
- · When rigging the product onto a truss, use a mounting clamp of appropriate weight capacity.
- When power linking multiple products, mount the products close enough for power-linking cables to reach.
- The bracket adjustment knobs allow for directional adjustment when aiming the product to the desired angle. Only loosen or tighten the bracket knobs manually. Using tools could damage the knobs.

Mounting Diagram

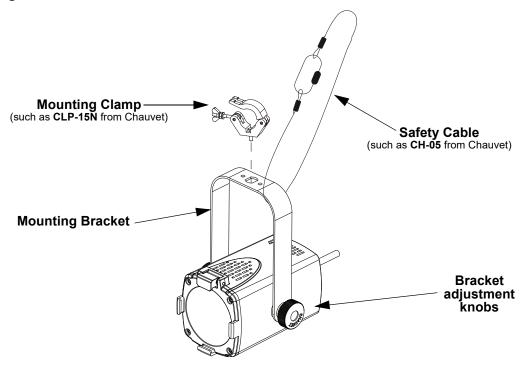



4. Maintenance

Product Maintenance

Dust build-up reduces light output performance and can cause overheating. This can lead to reduction of the light source's life and/or mechanical wear. To maintain optimum performance and minimize wear, clean your lighting products at least twice a month. However, be aware that usage and environmental conditions could be contributing factors to increase the cleaning frequency.

To clean the product, follow the instructions below:

- Unplug the product from power.
- 2. Wait until the product is at room temperature.
- 3. Use a vacuum (or dry compressed air) and a soft brush to remove dust collected on the external surface/vents.
- Clean all transparent surfaces with a mild soap solution, ammonia-free glass cleaner, or isopropyl alcohol.
- 5. Apply the solution directly to a soft, lint-free cotton cloth or a lens-cleaning tissue.
- 6. Softly drag any dirt or grime to the outside of the transparent surface.
- 7. Gently polish the transparent surfaces until they are free of haze and lint.



Always dry the transparent surfaces carefully after cleaning them.



5. Technical Specifications

Dimensions and Weight

Length	Width	Height	Weight
7.9 in (201.5 mm)	4.8 in (123 mm)	3.4 in (87.8 mm)	2 lb (0.9 kg)

Note: Dimensions in inches rounded to the nearest hundredth.

Power

Power Supply Type	Range	Voltage Selection
Fixed	120 VAC, 60 Hz or 220 VAC, 50 Hz	Fixed
Parameter	120 V, 60 Hz	230 V, 50 Hz
Consumption	24 W	24 W
Operating current	0.2 A	0.1 A
Power I/O	U.S./Canada	Worldwide
Fixed Power cord	Edison (U.S.)	Local plug

Light Source

Туре	Quantity	Color	Power	Current	Lifespan
COB LED	1	Warm white	20 W	0.5 A	50,000 hours

Photometrics

Parameter	Value
Beam angle	24°
Field angle	40°

Thermal

Maximum External Temperature	Cooling System
104 °F (40 °C)	Convection

Ordering

Product Name	Item Code	UPC Number
Eve TF-20 X (120 V)	10031991	7814622223397
Eve TF-20 X (220 V)	10031989	7814622223373
Eve TF-20 X WHT (120 V)	10031992	7814622223403
Eve TF-20 X WHT (220 V)	10031990	7814622223380







Contact Us

General Information	Technical Support
Chauvet World Headquarters	
Address: 3360 Davie Rd.	Voice: (844) 393-7575
Davie, FL 33314	Fax: (954) 756-8015
Voice: (954) 577-4455	Email: chauvetcs@chauvetlighting.com
Fax: (954) 929-5560	
Toll Free: (800) 762-1084	Website: www.chauvetprofessional.com
Chauvet U.K.	
Address: Unit 1C	Email: <u>UKtech@chauvetlighting.eu</u>
Brookhill Road Industrial Estate	
Pinxton, Nottingham, UK	Website: www.chauvetprofessional.eu
NG16 6NT	
Voice: +44 (0) 1773 511115	
Fax: +44 (0) 1773 511110	
Chauvet Benelux	
Address: Stokstraat 18	Email: BNLtech@chauvetlighting.eu
9770 Kruishoutem	
Belgium	Website: www.chauvetprofessional.eu
Voice: +32 9 388 93 97	
Chauvet France	
Address: 3, Rue Ampère 91380 Chilly-Mazarin	Email: FRtech@chauvetlighting.fr
France	Website: www.chauvetprofessional.eu
Voice: +33 1 78 85 33 59	
Chauvet Germany	
Address: Bruno-Bürgel-Str. 11 28759 Bremen	Email: DEtech@chauvetlighting.de
Germany	Website: www.chauvetprofessional.eu
Voice: +49 421 62 60 20	
Chauvet Mexico	
Address: Av. de las Partidas 34 - 3B (Entrance by Calle 2)	Email: servicio@chauvet.com.mx
Zona Industrial Lerma	Website: www.chauvetprofessional.mx
Lerma, Edo. de México, CP 52000	
Voice: +52 (728) 690-2010	

Warranty & Returns

For warranty registration and complete terms and conditions, please visit the Chauvet website. For customers in the United States and Mexico: www.chauvetlighting.com/warranty-registration. For customers in the United Kingdom, Republic of Ireland, Belgium, the Netherlands, Luxembourg, France, and Germany: www.chauvetlighting.eu/warranty-registration.